



CHARGING

- 1. UNSCREW BATTERY FROM ATOMIZER
- 2. SCREW BATTERY INTO USB CHARGER (CAREFUL NOT TO OVER TIGHTEN)
- 3. PLUG USB CHARGER INTO COMPUTER OR SIMILAR CHARGING DEVICE
- 4. LED ON BATTERY WILL FLASH 3 TIMES, LETTING YOU KNOW IT IS CHARGING
- LED ON USB CHARGER WILL REMAIN RED DURING CHARGING CYCLE. UPON COMPLETION IT WILL TURN GREEN
- 6. CHARGING CYCLE MAXIMUM 3 HOURS

LOADING

- 1. STARTING WITH THE COMPLETE PEN, REMOVE THE PEN CAP
- 2. LOCATED UNDERNEATH THE PEN CAP WILL BE YOUR CARTRIDGE.
- 3. UNSCREW YOUR VIUSAL CHAMBER FROM THE TOP OF THE ATOMIZER
- 4. LOAD PRODUCT INTO THE ATOMIZER, DO NOT OVER PACK
- 5. DURING LOADING AVOID CONTACT WITH THE CERAMIC RING
- 6. SCREW ON YOUR VISUAL CHAMBER

USE

- 1. AFTER LOADING YOUR CARTRIDE, PRESS THE POWER BUTTON 3 TIMES RAPIDLY TO TURN THE PEN ON
- 2. POWER BUTTON WILL FLASH WITH CORRESPONDING COLOR INDICATING CURRENT VOLTAGE
- 3. TO CHANGE VOLTAGE , PRESS BUTTON 3 TIMES RAPIDLY
- 4. BLUE= LT1 (LOW TEMP 1) ORANGE= LT2 (LOW TEMP 2) RED=LT3 (LOW TEMP 3)
- 5. ONCE CHOSEN, HOLD DOWN POWER BUTTON TO BEGIN RIPPING
- 6. CONTINUE TO HOLD POWER BUTTON DOWN DURING USE, APPX 10 SECONDS
- 7. WHEN FINISHED PRESS POWER BUTTON 3 TIMES RAPIDLY TO TURN OFF







MAINTENANCE

- 1. AFTER USE, MAKE SURE TO BURN EXCESS PRODUCT OFF OF THE CERAMIC RING
- 2. IT IS RECOMMENDED TO HOLD THE POWER BUTTON FOR 10 SECONDS UNTIL IT BLINKS, REPEAT IF NECCESSARY.

YOU MAY USE ISOPROPYL ALCOHOL AND COTTON SWABS TO CLEAN EXTERIOR PARTS

DO NOT: OVER PACK ATMOZIER, REDUCES AIR FLOW AND MAY

DAMAGE THE DEVICE

DO NOT: CHARGE NEAR A HEATING SOURCE


DO NOT: USE WITH HIGH VOLTAGE BATTERIES, MAY CAUSE CERAMIC

RING TO BURN OUT FASTER AND DAMAGE TO THE ATOMIZER

DO NOT: MODIFY THE UNIT IN ANYWAY

DO NOT: LEAVE IN EXCESS HEAT DO NOT: LEAVE IN YOUR CAR



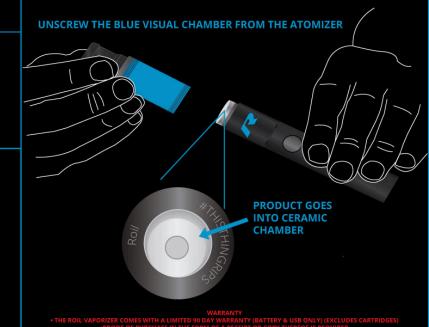

REGISTER YOUR ROIL ONLINE!

www.THISTHINGRIPS.com